

## Quickstart Hotfog Resonator A1

For more information please go through the entire user manual.



### Step 1

Remove all protection packaging materials and. Turn the compressor on and check the pressure gauge. Set it to 7 or 8 bar using the pressure reducer.

Bring the pressure up or down by pulling up slightly on the knob from the reducer. En turn it right to have more pressure en left to have lower pressing. Move the



Compressor 7-8 bar



Hotfog RLVM 5 bar

### Step 2

Check the pressure gauge when the Hotfog RLVM. If necessary, attach it to the desired pressure.

This ranges from 4.5 to 5 bar pressure. The best drop is obtained at a pressure proportional to the flow rate. This is indicated on the manometer of the pressure reducer. Keep in mind to the droplet formation, called the splashing of the resonator.

Bring the pressure up or down by pulling up slightly on the knob from the reducer. En turn it right to have more pressure en left to have lower pressing. first before pulling up slightly on the knob.

### Step 3


Check the needle valve on the front of the RLVM. For the spraying of germination inhibitors turn the valve wide open. One nozzle gives no more than 3 liters per hour. And when necessary, turn a little closer.



Completely turn open

### Step 4

Check the resonator, it should be centered like the drawing below.

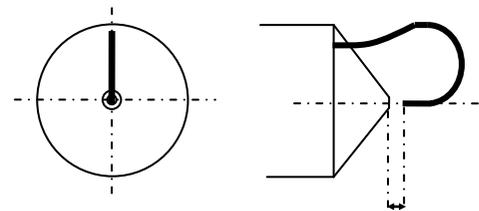

Centered, and distance about 1 mm

### Step 5

Connect storage tank to the fluid line. Doe de stekker in het



### Step 6

Plug the cord into a 220 volt outlet. And press the Reset button on the left side of the box.



### Step 7

Turn the timer on the desired time. The fan is turn and warm-up begins. By pressing the flow pushbutton you are testing the fluid flow. The unit turns off after the expiration of the time set by itself.

